

WALL 8

LVH44 MODULAR SYSTEM FOR RIGID WALLS WITH ANGLE FIXINGS

DESCRIPTION

- 1 Rigid wall construction
- 2 Lorient LVH44 intumescent air transfer grille
- 3 Lorient intumescent sealant around LVH44 perimeter to a maximum clearance of 25mm
- 4 **Fixing angle:** Full width galvanised steel angles (20 x 20 x 1mm) around perimeter of LVH44 on both sides with 200mm fixing centres
- 5 Air transfer grilles slot together using tab system


Note: For modular systems a 10mm (min) clearance around perimeter is needed

CONTENTS

- LVH44 air transfer grille
- Cover grille (optional)

TOOLS REQUIRED

- Steel angles
- Self tapping screws (3.5 x 16mm)
- Masonry anchors
- Lorient intumescent sealant

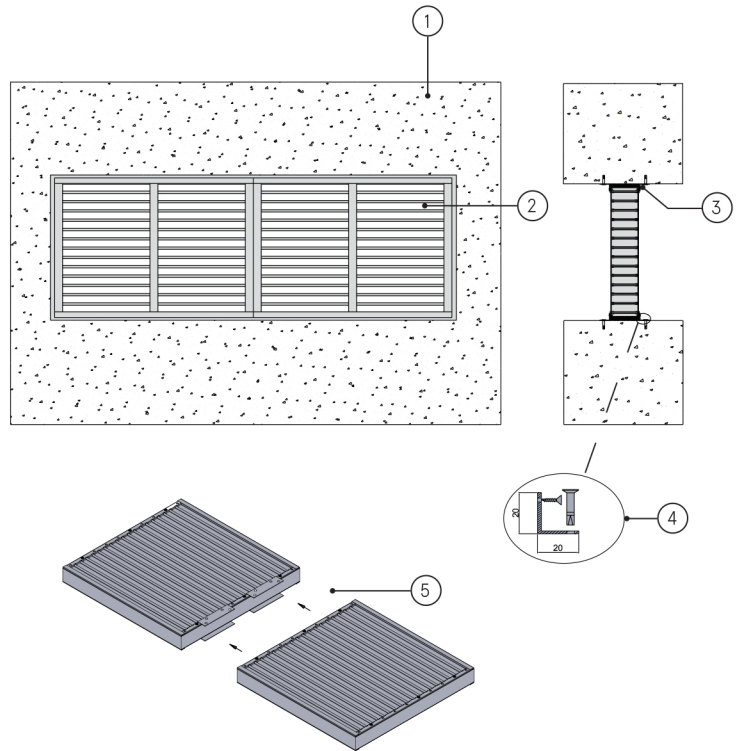

LVH44 for rigid wall modular systems with angle fixings

FR120

Fire Resistance in accordance with

BS 476-22:1987

Approval Ref

WFRC 121316 (AW8)

Max size.

1200mm x 600mm

Larger sizes can be used with a different mounting detail.

LVH44 air transfer grilles are supplied 2mm less than the nominal size e.g. a 300mm x 300mm is actually 298mm x 298mm.

INSTALLATION INSTRUCTIONS

- ▶ Slide the LVH44 modules together ensuring a bead of Lorient intumescent sealant is used in between air transfer grille modules.
- ▶ Secure tab with self tapping screws into LVH44.
- ▶ Fix the mounting angles onto the LVH44 using self tapping screws to **both sides of the modular air transfer grille.**
- ▶ Insert modular LVH44 into rigid wall opening (note: air transfer grille does not have to be centrally positioned in the opening).
- ▶ Fix the angles to the masonry wall with masonry anchors.
- ▶ Apply a bead of Lorient intumescent sealant to full depth around the perimeter of LVH44 as shown (note: maximum clearance of 25mm applies).
- ▶ Connect ductwork (or cover grille) directly to wall using approved breakaway connections to ensure compliance.
- ▶ **Note: Fixings supplied by others.**